

InPower LLC Technical Bulletin TB-79A Dec. 28, 2010
 Model ITM118 Interlock System Supported Vehicles

ITM118 Connections:

Year	Model	Eng	Trans	Park 1	Park 2	Door	Park Brake	Shift Lock
1996-1999	E150-E450	NOT Supported						
2000	E150-E450	4.6L/5.4L Gas	4R70W	C154-49 TR2 LB/BK	C154-50 TR4 LG/RD	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2000	E250-E450	7.3L Diesel	4R100	C154-49 TR2 WH/PK	C154-50 TR4 GY/BK	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2000	E250-E450		4R100	C154-49 TR2 LB/BK	C154-50 TR4 LG/RD	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2001	E150-E450	4.6L/5.4L Gas	4R70W	C154-49 TR2 LB/BK	C154-50 TR4 LG/RD	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2001	E250-E450	7.3L Diesel	4R100	C154-49 TR2 WH/PK	C154-50 TR4 GY/BK	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2001	E250-E450	6.8L V10 Gas	4R100	C154-49 TR2 LB/BK	C154-50 TR4 LG/RD	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2002	E150-E450	5.4L Gas	4R70W	C175-49 TR2 LB/BK	C175-50 TR4 LG/RD	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2002	E250-E450	7.3L Diesel	4R100	C154-49 TR2 WH/PK	C154-50 TR4 GY/BK	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2003	E150-E450	5.4L Gas	4R70W	C175-49 TR2 LB/BK	C175-50 TR4 LG/RD	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2003	E250-E450	7.3L Diesel	4R100	C154-49 TR2 WH/PK	C154-50 TR4 GY/BK	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2004	E150-E450	4.6L/5.4L Gas	4R70E/4R75E	C175-49 TR2 LB/BK	C175-50 TR4 LG/RD	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2004	E250-E450	6.0L Diesel	4R100	C154-49 TR2 WH/PK	C154-50 TR4 GY/BK	12V door signal requires a relay to convert to gnd signal when door is open.	PNP Harness	PNP Harness
2005-2008	E150-E450	4.6L/5.4L Gas	4R70E/4R75E	C175T-17 TR2 LB/BK	C175T-28 TR4 LG/RD	Door switch BK/WH	PNP Harness	PNP Harness
2005-2008	E250-E450	4.6L/5.4L Gas	5R110	SEIC TPO_P wire	SEIC TPO_P wire	Door switch BK/WH	PNP Harness	PNP Harness
2005-2008	E250-E450	6.0L Diesel	5R110	SEIC TPO_P wire	SEIC TPO_P wire	Door switch BK/WH	PNP Harness	PNP Harness
2005-2008	E250-E450	6.8L V10 Gas	5R110	SEIC TPO_P wire	SEIC TPO_P wire	Door switch BK/WH	PNP Harness	PNP Harness