


IMPORTANT NOTICE

Modified procedures for InPower Solid State Contactors Models:

SSC10-100
SSC10-150
SSC10-200
LVD10 Series

InPower has changed the method of mounting these contactors. The new procedure is to use thermal grease between the contactor bottom and the metal mounting surface. We will no longer use the thermal transfer pad. The new procedure is:

- Step 1 Apply the supplied thermal grease to the bottom surface of the contactor as shown in the diagram below.
- Step 2 Mount the contactor to the flat metal mounting surface using four #8-32 screws (not provided). Torque the screws to 5 inch pounds.

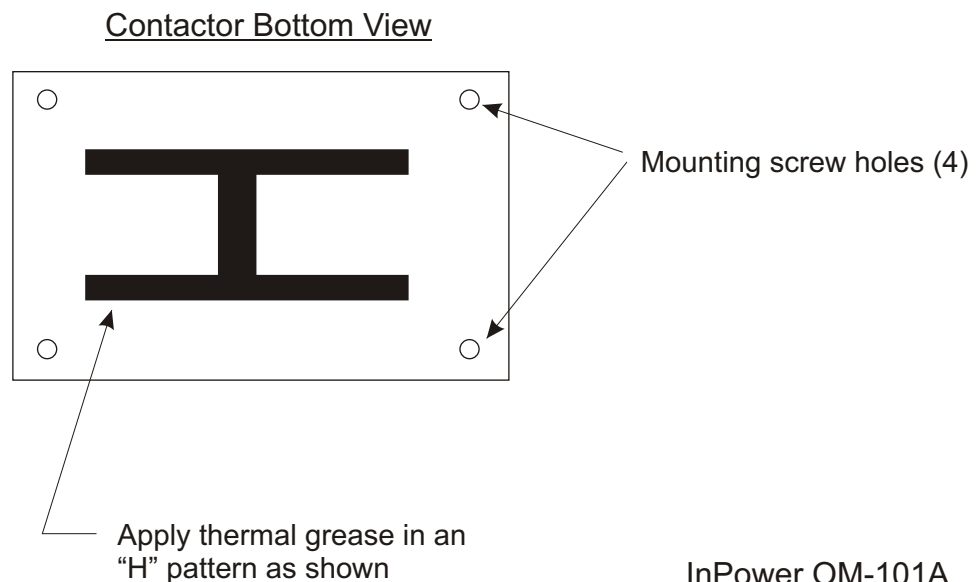

InPower OM-101A
November 11, 2009