



FLASHER REPLACEMENT INSTRUCTIONS

CONVERTING Transpec Model 6500 To InPOWER Model SBF90

Transpec Model 6500

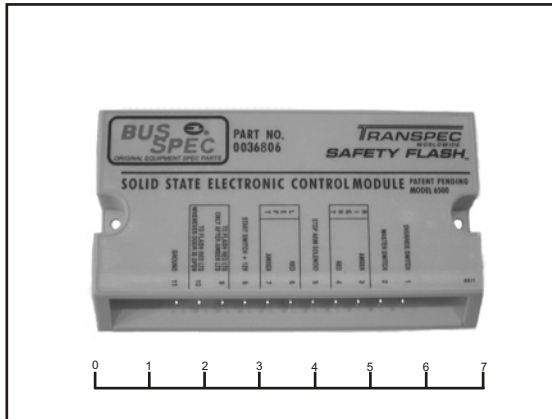

InPOWER Model SBF90

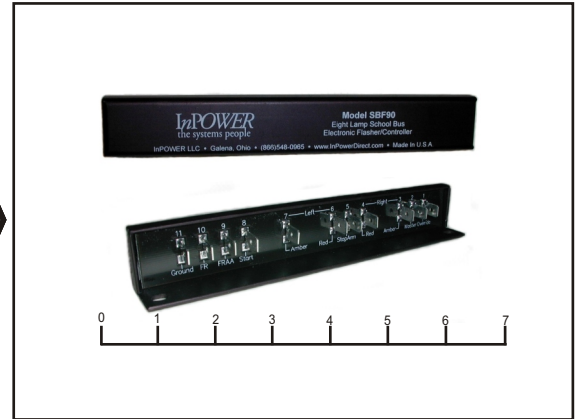

Wiring Conversion Chart

Wire On

Transpec Model 6500

<u>Terminal</u>	<u>Description</u>
1	Override Switch
2	Master Switch
3	Right Amber
4	Right Red
5	Stop Arm Solenoid
6	Left Red
7	Left Amber
8	Start Switch +12V
9	To Flash Red LTS Only After Amber LTS
10	To Flash Red LTS Whenever Door is Opened
11	Ground

Goes to

InPower Model SBF90

<u>Terminal</u>	<u>Description</u>
1	Override Switch
2	Master Switch
3	Right Amber Lights
4	Right Red Lamps
5	Stop Arm
6	Left Red Lights
7	Left Amber Lights
8	Start Switch
9	Flash Red ONLY After Amber
10	Flash Red When Door is Opened
11	Ground

NOTES:

- 1 See Figure 1 & 2 for wiring details.

FLASHER REPLACEMENT INSTRUCTIONS

CONVERTING Transpec Model 6500 To InPOWER Model SBF90

Figure 1 Wiring Before Flasher Conversion

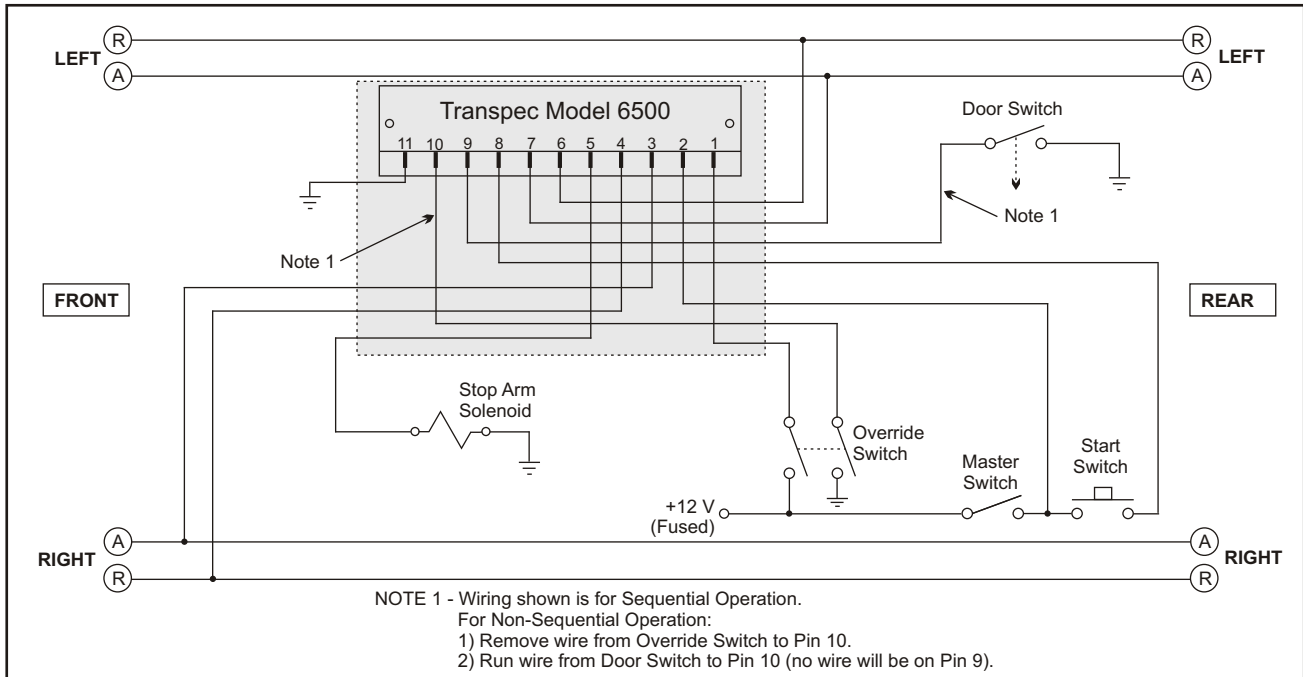


Figure 2 Wiring After Flasher Conversion

