


FLASHER REPLACEMENT INSTRUCTIONS

CONVERTING Weldon Model 7000-1000-00 To InPOWER Model SBF90

Weldon Model 7000-1000-00



InPOWER Model SBF90

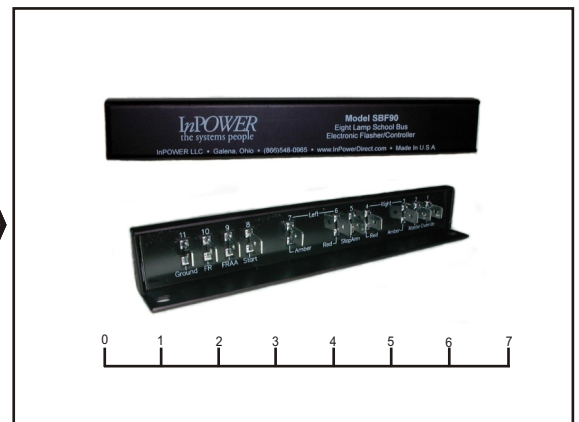

Wiring Conversion Chart

Wire On

Weldon Model 7000-1000-00

Pin	Description
8	Override Power
6,7	+ Batt Power
5	Right Amber
4	Right Red
3	Stop Arm
2	Left Red
1	Left Amber
9	Start Switch (-12V)
10	Seq. Door Sw. (Gnd)
11	Non-Seq. Door Sw. (Gnd)
12	Flasher Ground

Goes to

InPower Model SBF90

Terminal	Description
1	Override Switch (+12V)
2	Master Switch (+12V)
3	Right Amber Lights
4	Right Red Lamps
5	Stop Arm
6	Left Red Lights
7	Left Amber Lights
8	Start Switch
9	FRAA (Flash Red ONLY After Amber)
10	FR (Flash Red When Door is Opened)
11	Ground

NOTES:

- 1 Weldon unit shown is the new type with the 12-pin Amp Multilock 070 connector.
- 2 See Figure 1 & 2 for wiring details.

FLASHER REPLACEMENT INSTRUCTIONS

CONVERTING Weldon Model 7000-1000-00 To InPOWER Model SBF90

Figure 1 Wiring Before Flasher Conversion

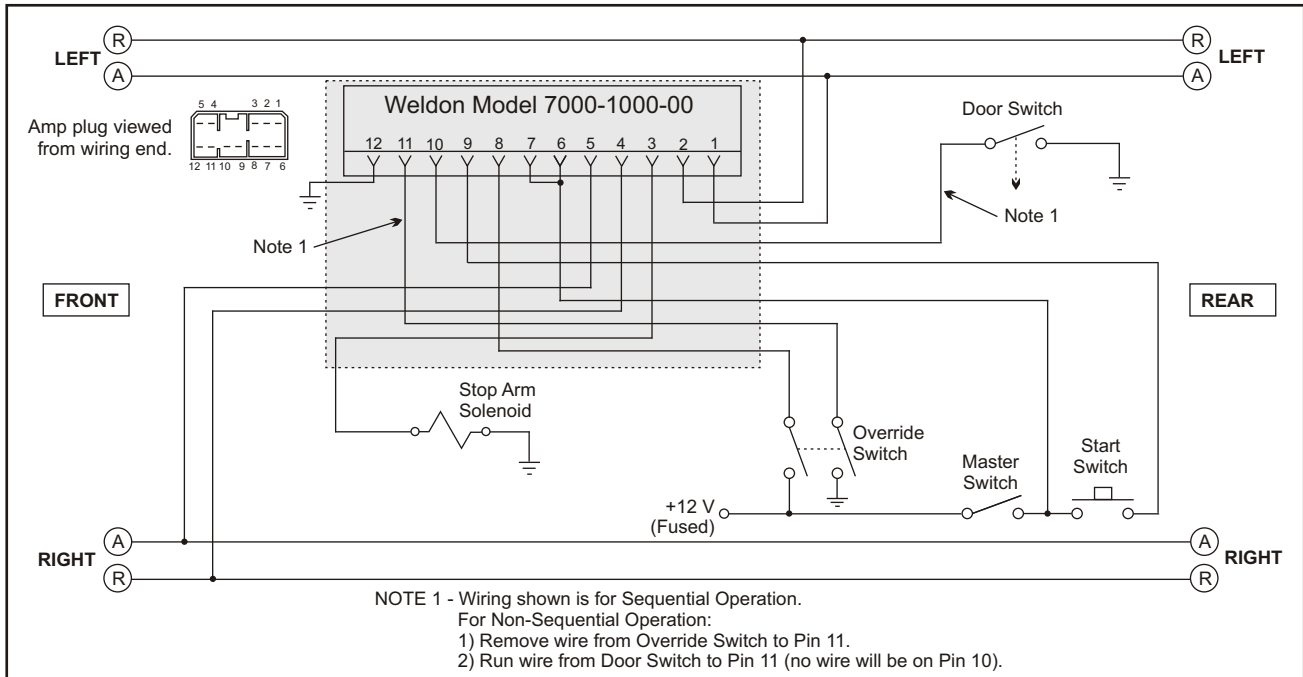


Figure 2 Wiring After Flasher Conversion

